




EMC CARDS

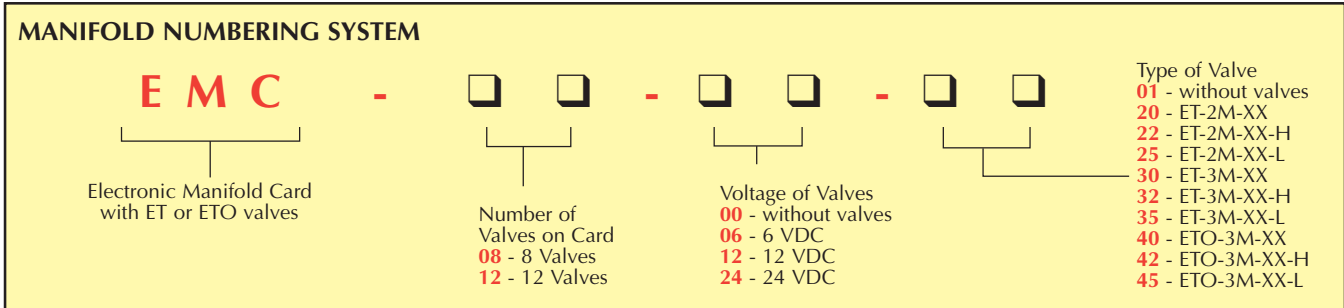

EMC-08-00-01 and EMC-12-00-01 are part numbers for cards without any valves, and without manifold. Manifold mounting hardware is included. Manifolds may be ordered separately, if desired.

Part numbers are: 15482-8 and 15482-12

Convenience in interfacing electronics and pneumatics... fast mounting, completely assembled, manifolded valve cards.

Clippard Electronic Manifold Cards

Now you can direct low-voltage DC signals from controllers, systems, computers or other sources to operate powerful pneumatic valves with a minimum of piping and hook-up.

Self-contained card includes:

- 8 or 12 Clippard ET interface valves
- Manifold mount for single air supply
- Circuit board fully wired
- Instant plug-in with 25-pin connector
- Resistor, diode, LED and switch for each valve
- Auxiliary power supply connection

Ready to operate quickly. Just mount the card and make external connection.

And each valve may be individually removed and replaced without any need for desoldering!

Features

- Fast, easy to mount
- Pre-assembled; all valves mounted
- 8 or 12 valve sizes
- 6, 12 or 24 volts DC
- Low power requirements (0.67 watt per valve)
- Choice of valve types
- Each valve switchable
- Shut-off spike protection
- 25-pin connector
- No expensive card rack required



Auxiliary Power Input

Power to operate the valves may be provided through two sources: ONE, through the 25-pin connector if your signal source also has sufficient power to operate the bank of valves, or TWO, through a separate auxiliary power input connection built into the board. To isolate power from the 25-pin connector, use the power source selector switch. NOTE: In applying power on a temporary basis, use care to observe proper circuit polarity.

Power Selector Switch

Two-position selector switch enables choice of power input source (25-pin connector or auxiliary).

25-Pin Connector

Clippard Electronic Valves

Reverse Polarity Protection

Circuit using diodes and capacitor provides input voltage protection against reverse polarity.

Resistor-Diode-LED Circuit

Individual circuit to each valve provides protection against shut-off spikes. LED is illuminated when valve is actuated.

Valve Connection Cords

Cord and plug leads are terminated with solder connections on the board, and connect by molded plug to the valves. All connections are completed at the factory.

Clippard Valve Manifold

Compact, efficient mounting of the valves is by Clippard multi-valve manifolds.

Valve Identification

Valve numbers are silk-screened on each panel.

Mounting Holes

Four (EMC-08) and six (EMC-12) mounting holes 0.191" dia. are built into each board.

LED Bank


Illuminated LED signals that the valve is actuated.

Printed Circuit Board

Durable laminated fiberglass

3-Position Detented Switches


Three position slide switch provides for: ON - Power "ON"; valve is activated OFF - Power "OFF"; valve not connected CONN - Valve connected to 25-pin connector, and will be controlled through it.

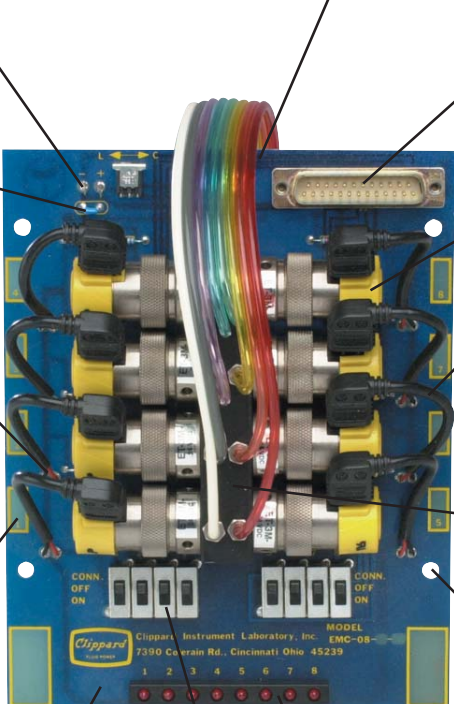





ET VALVES & ELECTRONIC MANIFOLD CARDS

EMC-08

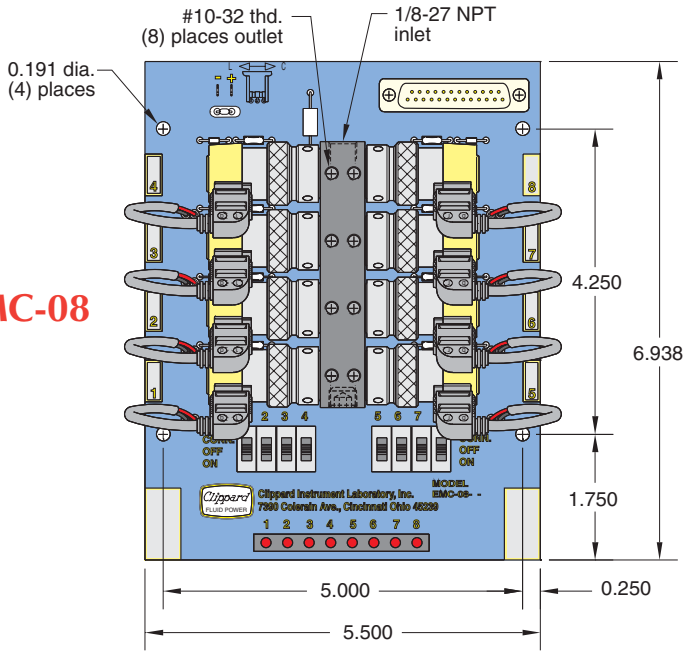

EMC-12

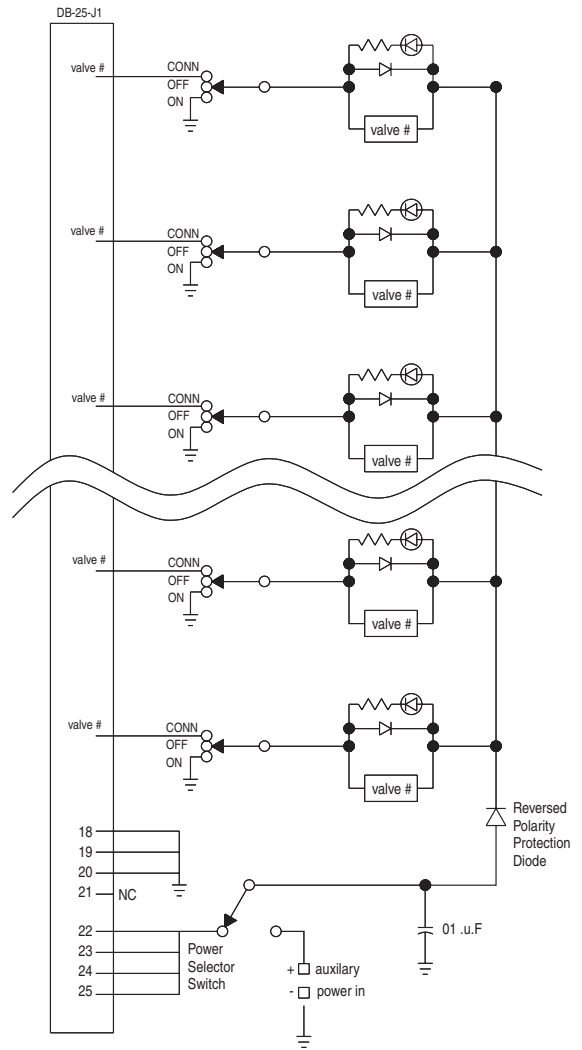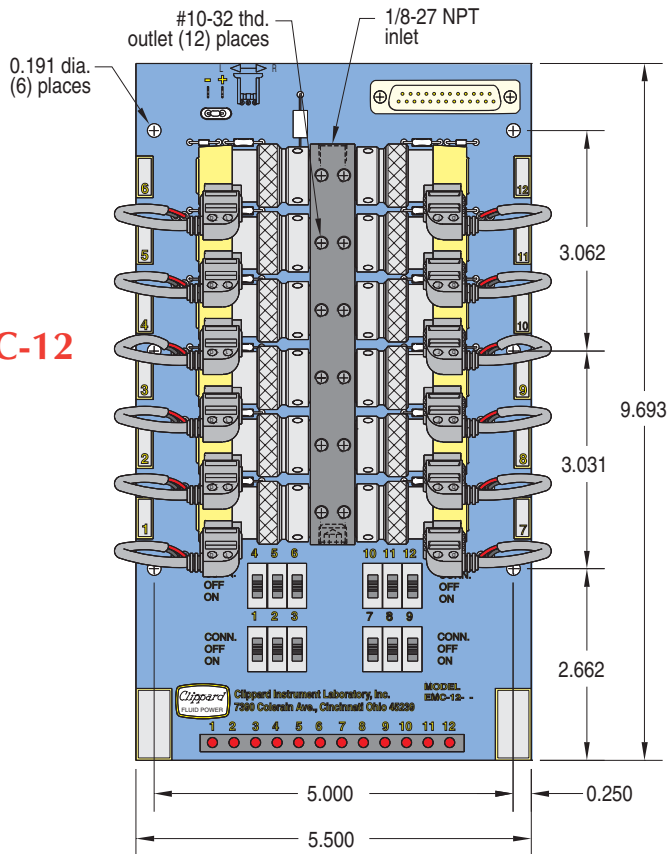

Wiring Diagram

Note: Manifold mounted valves are Normally-Closed. Use ETO models if exhaust must be ported. ETO models cannot be used "Normally-Open" without special piping.